

0 M N I 3

DIGITAL MICROSCOPE AND MEASUREMENT SYSTEM





0 M N I 3

DIGITAL MICROSCOPE AND MEASUREMENT SYSTEM

See what you need to see.

Leverage advanced technology to move to hyper speed, superprecision, inspection. Omni 3 has been engineered to deliver one of the most advanced and intuitive digital microscope experiences.

Powerful, embedded software can process complex imaging tasks without a PC. Custom designed to deliver maximum power.


OMNI3


Build your unique Omni solution.

Tailor the Omni 3 by choosing the apps that meet your specific requirements.

Our apps range from advanced measurement tools to help meet critical manufacturing tolerances to comparison tools ensuring the highest production quality.

Evaluate the apps free of charge to determine which best meet your needs with our 30 free trial click of each app.

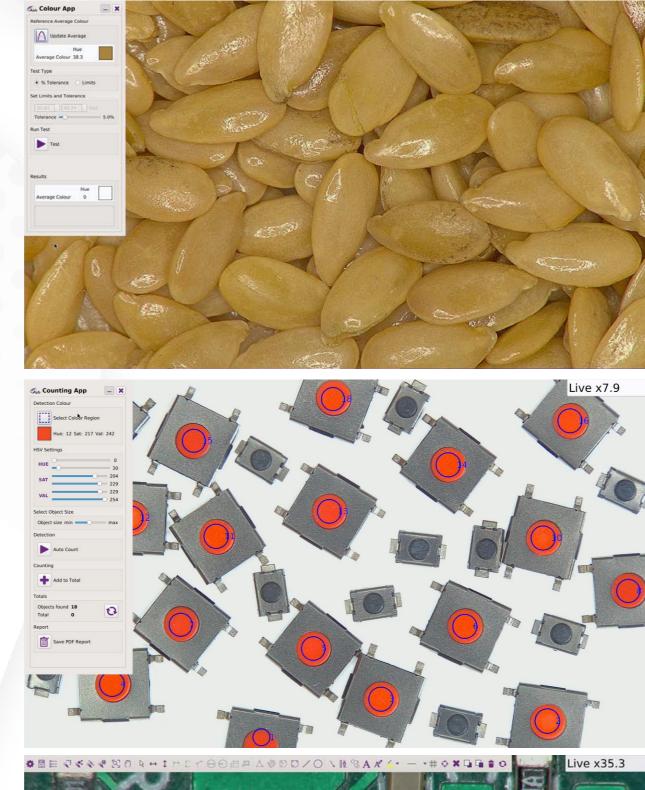

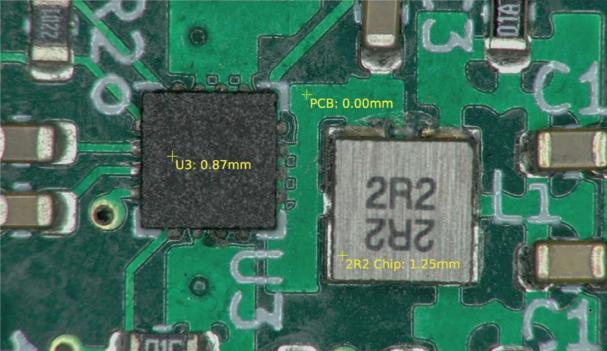

Ð

Ⅲ

*

Ρ

11 - **11**

Ash

Q

Q

0 Advanced algorithms automatically calculate the colour value of any sample.

Identify contaminants or foreign objects within your sample. Eliminate human error and improve yield by up to 50%.

Reports can be generated for easy documentation and traceability.

Object Counting App Automatically identify and count the number of objects within your region of interest.

Increase efficiency by 70% whilst eliminating human error.

Significantly reduce the time spent manually counting parts while reducing costly overheads. Report generation is quick and simple for easy documentation and traceability.

Rapidly inspect your parts up to five times quicker when compared to outdated manual inspection methods.

Colour Analysis App

Z Height Measurement App

Measure in 3D on the new Omni 3

Now you can measure in the Z axis, in addition to the X and Y axes, bringing the Omni 3 capability to a whole new dimension.

APPS

2D Measurement & Graticules

Intuitive on screen full 2D patented measurement application. Point to point, diameter, angle, adjustable X-Y grid, shapes and annotation features to accommodate a multitude of samples specifications.

Graticule creation allows samples to be analysed against on-screen digital templates with set tolerance limits. It also enables quick go/no-go defect analysis.

DXF Import & Export

Import a range of DXF files to create graticules for overlay comparison with parts.

Imported DXF files can be edited and annotated on the Omni **3** system.

Image Stacking

View a sample with different layers all in focus at the same time. Omni **3** automatically captures several images from 2 to 12 at different focal depths and creates an image based on the sharpest regions from each of these separate captures.







APPS

Image Comparator Side by Side

Visually compare your live sample image to a stored master image in the form of a split screen. Add notes through annotation and save the comparison image for documentation and traceability. Enables rapid identification of differences between gold sample and test samples.

Image Comparator Overlay

0

Ō

D

\$

8

Ø

11 - 11

Create an image overlay of a master image to identify defects by overlaying and flashing the live sample image against the stored master image.

Enables rapid identification of differences between gold sample and test samples.

FEATURES & BENEFITS

Super Fast Auto-Focus[™]

Place the sample under the Omni 3 and it will immediately focus on your part throughout the inspection process Inspect your parts up to three times faster. Quickly and seamlessly inspect your part without having to adjust manual focus or change the height of the part.

SpotFocus[™]

Quickly focus on the area of interest by simply using the mouse pointer. Increase speed, improve accuracy and reduce human error with the capabilities of SpotFocus[™]. *

Manual Rocker Focus[™]

Use Manual Rocker Focus[™] to accurately adjust the focus level to your region of interest. Save time by quickly adjusting the focus level using the rocker icon to inspect specific regions on an object when in manual focus mode.


Advanced Camera Settings

The new Advanced Camera Settings gives the user more power and control to enhance the image for a wide range of inspection and measurement capabilities.

Ensure image quality exceeds your needs. Unlock the full potential of Omni 3 by finetuning sharpness, contrast, saturation and camera shutter speed to suit your specific requirements.





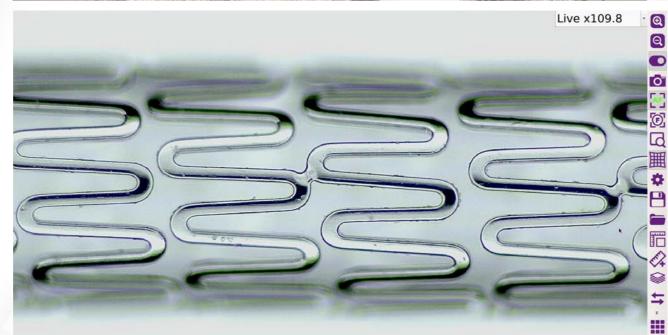

Omni 3 offers an enhanced, crystal clear image for even the most demanding inspection applications.

View parts in real time with no video lag, allowing you to comfortably inspect, rework, modify or assemble anything.

Cash The Omni 3 has improved depth of field, making inspection much faster and more efficient without the need for changing focus positions or adjusting camera height.

FEATURES & BENEFITS

Superb Image Quality

Experience unrivalled Full HD video imaging never seen before in an ASH system. AshCam+[™] enables vibrant image quality ensuring true representation of your sample.

AshTruColour[™] - True Colour Reproduction

View true colour reproduction of your sample with Omni 3. AshCam+[™] brings next generation colour reproduction to Omni 3.

Replicate real and accurate colours as seen with the naked eye for true colour representation. *

Zero Video Latency

There is zero delay between movement under Omni 3 and what you see on the screen, resulting in a more efficient inspection process. Omni 3 is 3x times faster than our previous systems.

Improved DoF



FEATURES & BENEFITS

AshCal™

Omni 3 is factory calibrated before shipping. No time is wasted performing recalibrations between changing magnifications.

RTLDC[™]

Real-Time Lens Distortion Correction[™]*. Lens distortion is inherent in all microscopes. Image distortion at the outer edges of large samples is automatically corrected by the Omni 3.

User Privileges

User privilege settings enables operational control and traceability. Assign multiple users with access to different settings and features, improving security and streamlining the inspection process.

Interchangeable Lighting

Multiple types of interchangeable lighting available, including Ring Light, DomeLight, Polarised Light and UV Light to address any inspection application.

Email

Save time by emailing directly from Omni 3.

Save to Network

Networking enables direct saving to the server or cloud for increased workflow efficiency.

On Screen Preset Buttons

On Screen Preset Buttons allow quick access to pre-configured part-specific system settings.

Image Stamping

Image Stamping with time, date, user and magnification level. Easy documentation & traceability for accurate quality control records using image capture to USB key.

WHAT OUR CUSTOMERS SAY

30x faster inspection increases production throughput Pfizer

Challenge

Q Q

0

[AF]

D

Ⅲ

4

8

10

Ð

\$

Cash

To ensure the safety of pharmaceutical packaging, Pfizer required a sophisticated solution that was reliable and fast. The production process requires inspection and measurement of all pharmaceutical packaging to identify defects or anomalies. This process must be quick and accurate to ensure production levels are maintained. To date, this process was performed on an outdated machine which could not save or share images or reports detailing any findings or defects. In addition, the machine was stored in a facility outside of their department and could not be moved. This unnecessarily created additional operator time for each sample. The old system also took thirty minutes to start up.

Solution

Omni was the ideal solution for Pfizer. It provided a digitised, capable solution within their department for quick accessibility. This allowed for rapid inspection and measurement of defects. Reports are automatically generated and stored within Omni or an external USB, streamlining reporting for documentation and traceability. The Ash solution has also complimented their ability to work with international departments through live sharing results from the Omni via video meetings.

Result

Originally, Pfizer's process, from start to finish, took thirty minutes, it's now down to less than one minute. And all aspect of the process are improved - better identification, capture, reporting and sharing. The footprint of the new solution is minimal relevant to the previous, and is sited alongside the production line.

11X faster. 3X accuracy. Sweet! British Sugar

Challenge

To ensure quality and food safety requirements are met British Sugar continually complete a lab test where they count live and dead yeast cells. To date this process has been done manually. A laborious process, that, by its nature is prone to human error. The operator, using a microscope, manually counting the white and blue cells on screen, manually inputting the data into spreadsheets, and applying some calculations. For some time British Sugar had been looking for a way to improve this process.

Solution

Paul Wrathmall from British Sugar presented Jamie Greatrix our Technical Sales Manager in the UK with their cell counting challenge. Jamie collaborated with our R&D department to explore possible solutions. British Sugar provided test samples and we set about built a working model in-house to solve the problem. We used our Acumen AI system, a customised App, and a custom mechanical jig to ensure lighting consistency. With a camera to automatically count white and blue cells. The system automatically applied the required algorithms, automatically saved the data, and automatically created a PDF report. We presented the solution to British Sugar, they were surprised and delighted with the speed, accuracy and completeness of the system and implemented it immediately.

Result

Our solution, so far, has reduced average task time from 17 minutes to 90 seconds. As the AI bot gets smarter task time will further reduce. With the task largely automated the possibility for human error was greatly reduced. The solution also streamlined the cell counting documentation and reporting process for British Sugar.

Included System Components



Technical Specifications

0 ۲ 000 LENSES LIGHTS OTHERS +5 Lens LED Ring Light Wireless Keyboard and Mouse USB Memory Stick HDMI Cable

Optional System Components

		<u> </u>
LENSES	LIGHTS	CONTRO
+5 Lens AI 280-150	Diffused LED Dome Light AI 100-045	KPII External k FI 806-002
+10 Plan 1x Lens AI 100-055	UV Ring Light 367nm AI 801-421	KIII External K FI806-003
+25 Lens AI 100-053	Polarised Ringlight & Analyser (58mm)	
Ash 360 Rotating Viewer AI 801-422	AI 801-423	000
Polarising Lens (Analyser) AI 100-041		OTHERS Ash PC Capture
Sub-Stage Polarising Film &		AI 100-052
Analyser AI 801-835		24" Monitor AI 801-416
Sub-Stage Polarising Film AI 801-836		Hard Carry Case AI 801-563
Polarised Ringlight & Analyser (58mm) AI 801-423		

<i></i>	±		
CONTROLLERS	STANDS & STAGES		
KPII External Keypad FI 806-002	XY Stage for Uplight AI 100-011	Premium Illuminated Track Stand AI 100-040	
KIII External Keypad F1806-003	XY Stage	Premium Track Stand AI 100-043	
	Large XY Stage	Articulated Arm Stand AI 100-039	
0	•	Dual Arm Boom Stand AI 100-038	
FHERS PC Capture 100-052	Oblique Tilting Stage AI 801-414		

	Lens Type	+5
tical	Magnification Range (X)	2.5 - 68
	X-axis FOV (mm)	200 - 7.5
	Y-axis FOV (mm)	112 - 4.2
ital	Magnification Range (X)	69d - 136.5d
	X-axis FOV (mm)	7.5 x 3.75

Y-axis FOV (mm) 4.2 x 2.1 195 Working Distance (mm) 80 (min. zoom) / 0.5 (ma Depth of Field (mm) optical)

*Based on 24" Monitor

Camera Specifications*

Opt


Dig

2-D Measurement Accuracy

Accuracy (%)	+/-1	+/- 1	+/-1	+/- 1
Z Height Range & Accuracy				
Lens Type		Range	Accuracy	
+5		0 - 25mm	100 µm	
+10 Plan 1x		0 - 6mm	100 µm	

Technical Specificat

Lens Type	Range	Accuracy	
+5	0 - 25mm	100 µm	
+10 Plan 1x	0 - 6mm	100 µm	
echnical Specifications			
	OMNI 3		
Magnification Range (with supplied +5 Lens)	2.5 - 68 (Optical) 69d - 136.5d (Digital)		
Camera Resolution	1920 x 1080 Pixels		
Monitor Connections	HDMI / DVI		
Monitor Requirements	HD Ready / Full HD (Recommended)		
Input / Output	HDMI Output USB 2.0 (x4 Ports) Mini USB Port General Purpose IO (x3 Ports) DC Power Jack 24V		
Internal Storage	16GB		
Image Capture	Internal Storage Removable USB Image Storage USB on the Go (PC Connectivity)		
Power	24W	-	
Dimensions	216mm x 125mm x 136mm		
Weight	1.5kg	_	
Operating Temperature	Storage 10°C to 60°C Operating 5°C to 40°C		

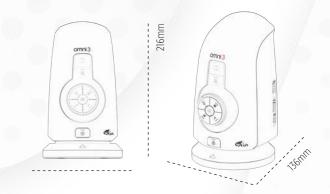

	165mm		
	+10 Plan 1x	+25	+50
	4.8 - 136	54.7 - 336	109.4 - 673
	76 - 3.8	9.3 - 1.5	4.6 - 0.76
	59.5 - 2.1	5.4 - 0.85	2.6-0.43
	137d - 272d	337d - 673.3d	674d - 1346d
	3.8 x 1.9	1.5 x 0.75	0.76 – 0.37
	2.1 x 1.1	0.85 x 0.425	0.43 - 0.22
	78	36	34
ax.	35 (min. zoom) / 0.1 (max. optical)	0.3 (min. zoom) / 0.1(max. optical)	0.1 (min. zoom) / 0.05 (max. optical)



ASH HQ - Ireland B5, M7 Business Park, Naas, Co. Kildare W91 P684 +353 (0) 45 88 22 12

ASH UK Covert Farm, Long Lane, Easte Haddon, Northamptonshire NN6 8DU +44 (0) 7592 523 767









All systems are now multilingual. Images, descriptions and technical data subject to change. Ash reserve the right to make changes without notice.

sales@ashvision.com

Printed on recycled paper